


ML630 / ML730 BOLT ON ARM INSTALLATION INSTRUCTIONS

WARNING: TO AVOID FIRE, SHOCK OR DEATH, TURN OFF AND LOCKOUT POWER BEFORE PERFORMING ANY MAINTENANCE.

CAUTION: THIS FIXTURE MUST BE WIRED IN ACCORDANCE WITH THE NATIONAL ELECTRIC CODE AND ALL APPLICABLE LOCAL CODES. PROPER GROUNDING IS REQUIRED. ALL WORK SHOULD BE DONE BY A QUALIFIED ELECTRICIAN.

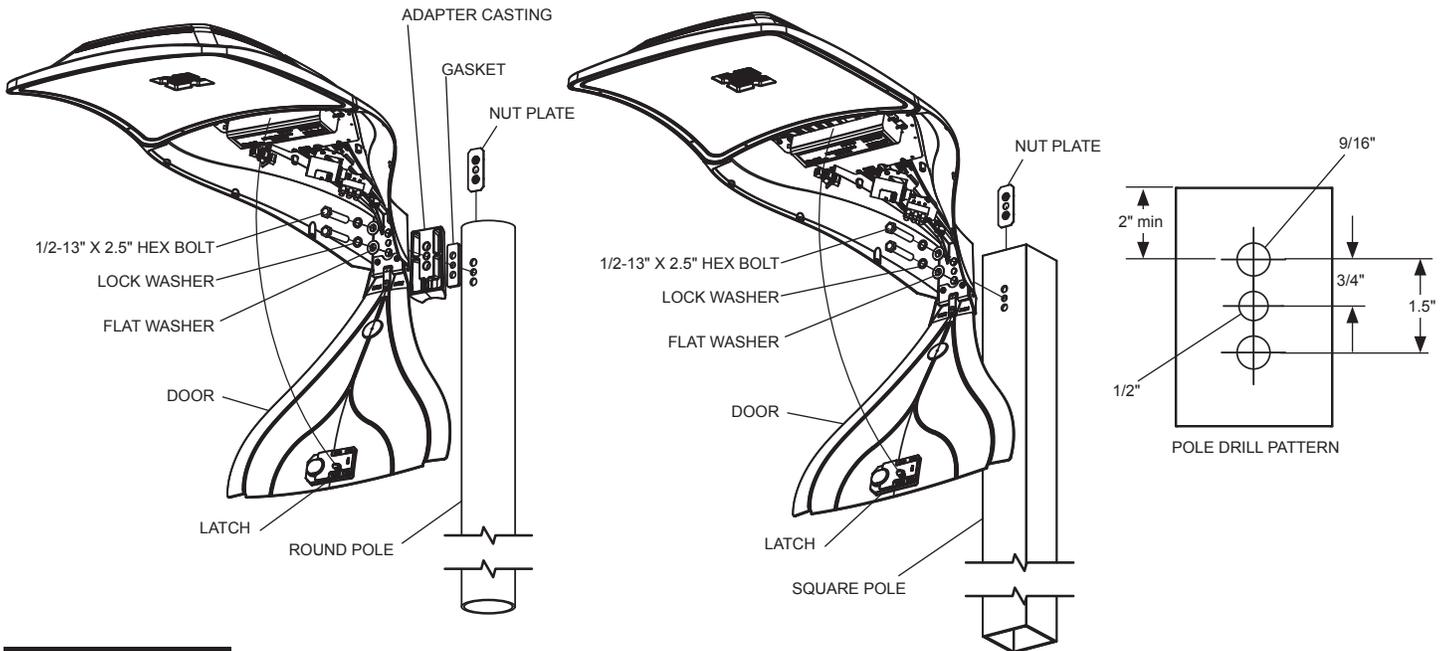

STEP 1

Add arm drill pattern to pole if required.
Release door latch and open door.

STEP 2

Insert the nut plate into the pole aligning holes in plate with existing holes in pole.

STEP 3

Sq. Poles Only: Attach fixture to pole with bolts, lock washers & flat washers as shown.

Rd. Poles Only: Attach fixture, adapter casting, and gasket to pole with bolts, lock washers & flat washers as shown.


STEP 4

Connect supply wires to terminal block.

STEP 5

Close the door, assuring that the door is seated properly and fully engaged to the housing.

WIRING SCHEMATIC

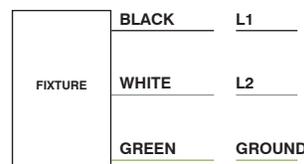

NOTE: POLE MUST BE PROPERLY GROUNDED. TO ENSURE PROTECTION, THE EARTH GROUND WIRE (GREEN) MUST ALSO BE CONNECTED TO THE POLE GROUND LUG. FAILURE TO DO SO CAN REDUCE OR ELIMINATE SURGE PROTECTION, RESULTING IN POSSIBLE DAMAGE TO THE LUMINAIRE.



SternbergLighting

ESTABLISHED 1923 / EMPLOYEE OWNED

800-621-3376
555 Lawrence Ave., Roselle, IL 60172
info@sternberglighting.com
www.sternberglighting.com